



**RIM REPAIR TOOL**  
for pulling out dents  
code 720030



1. Before using the straightening tool, remove the tyre, inner tube and rim tape from the rim.
2. If necessary, loosen and remove the spokes from the area where the rim has the high point deformation,
3. place the straightening tool on the rim so that the spindle is positioned where the high point is,
4. turn the spindle handle until the deformation is pushed out of the rim. Check the rim and, if necessary repeat the above process until the rim is satisfactory.
5. refit any removed spokes and re-true the wheel to correct any alignment or radial run-out.

