

# Instructions for assembly



## PROFESSIONALTOOLS


### WORKLIFT´R 2.0 HYDRAULIK WORK STAND

Workstation can be pulled out on both sides  
for bikes/e-bikes  
incl. adapter A & B  
max. payload 100 kg  
code 290018



#### what's included?

- 1 Worklift´r 2.0
- 2 clamping frame, incl. spindle & adapter
- 3 ramp
- 4 rateriner knob
- 5 bolts

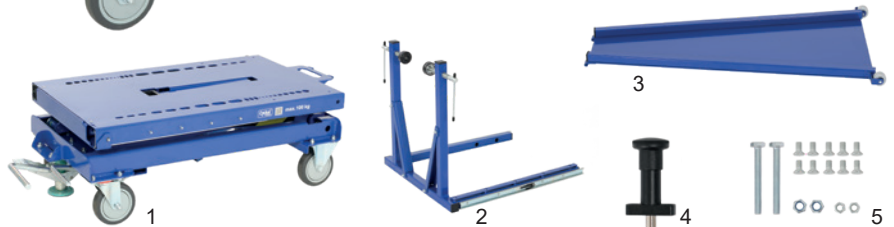

#### How to assemble the Worklift´r 2.0

- POS. 1 Mount the ramp using the M6 hex bolts screws
- POS. 2 Mount the rateriner knob to the stand
- POS. 3 insert clamping frame in guide rail (lock on both sides)
- POS. 4 Push the clamping frame completely in



POS. 1  
Mount the ramp  
2x M6 hex bolts




POS. 2  
Mount the rateriner knob  
2x M5 hex bolts



POS. 3  
Insert clamping frame  
in guide rail



POS. 4  
Push the clamping frame  
completely in

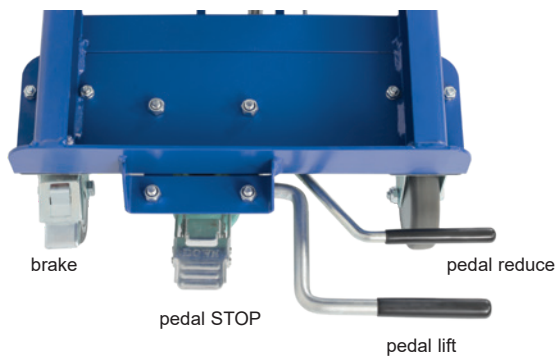

**AXLE SUPPORT ADAPTER G "IGEL"**  
3D universal clamping  
code 290017  
(not included)



**WORKSHOP GLOVES**  
100% Nylon, black, Norm: EN 388  
S(3) M(4) L(5) XL(6) XXL(7)  
code 29255+  
(not included)